



# Sizing Graphs

## SIZING INSTRUCTIONS

To size the Super Capacity CCS separator OWS unit for your particular application, first select the correct chart for the ISO viscosity grade of the lubricant being used in the air compressor. **1.** Locate the compressor capacity on the vertical scale at the left hand side of the graph. **2.** From this point travel horizontally to the right until you intersect the line representing the base stock of the lubricant being used in the compressor. **3.** At this intersection, travel vertically downward to the bottom scale indicating the recommended unit size. **NOTE:** If you arrive at a point on the scale that indicates the maximum capability of the unit...it is advised to recommend the next larger size unit.

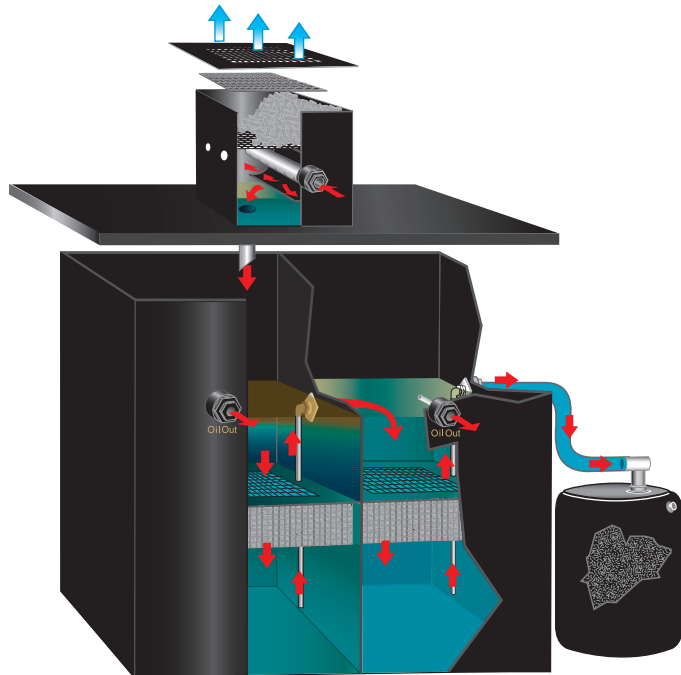

## ISO 32 & 46 LUBRICANTS

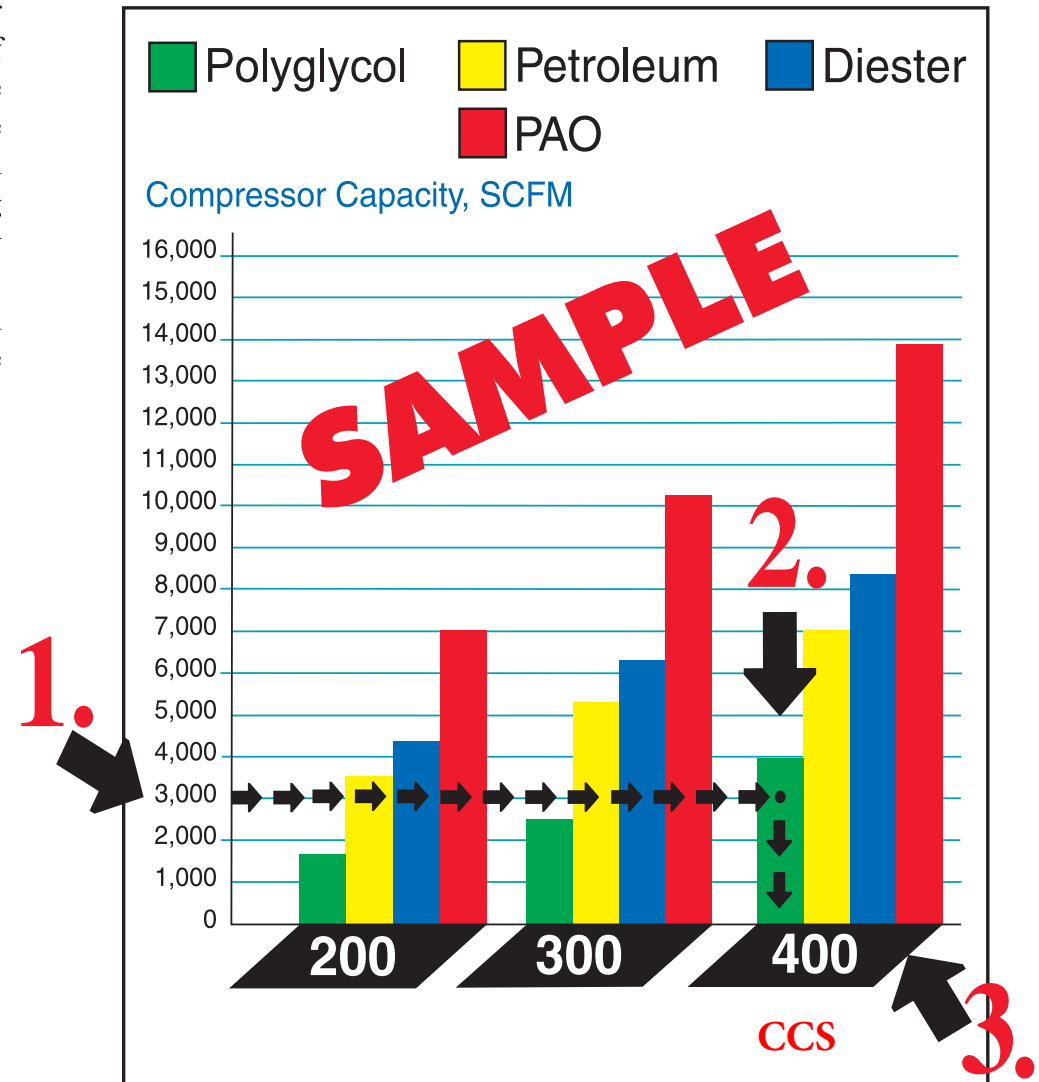

103 W. Weaver St., Carrboro, NC 27510  
PH: 314-579-9755 sales@skimoil.com  
SkimOIL.com

**SKIMOIL**<sup>®</sup>  
INC.


# ISO 32 & 46 LUBRICANTS

## Sizing Graphs

■ Polyglycol   
 ■ Petroleum   
 ■ Diester   
 ■ PAO

### Standard Models


Compressor Capacity, SCFM

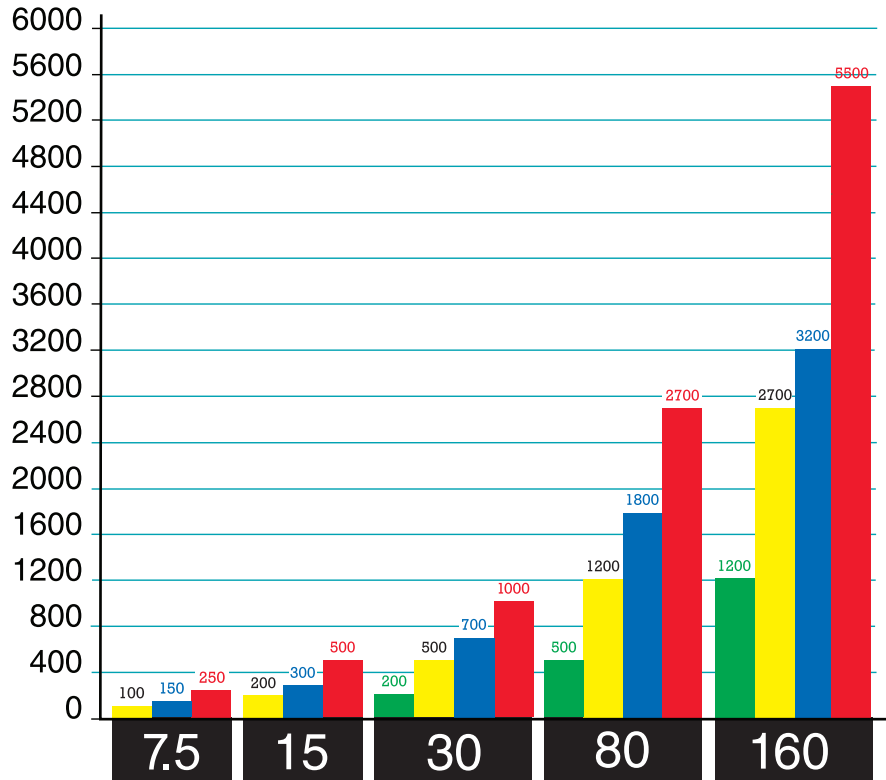

CCS

### Super Capacity Models

Compressor Capacity, SCFM

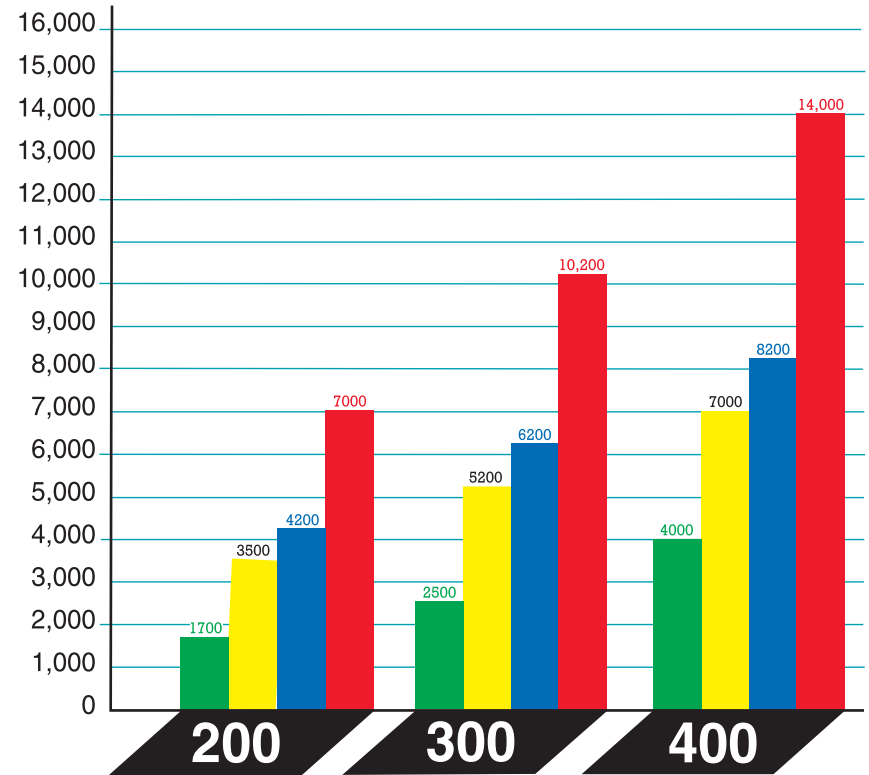

CCS



103 W. Weaver St., Carrboro, NC 27510  
 PH: 314-579-9755 sales@skimoil.com  
 SkimOIL.com


# ISO 68 LUBRICANTS

## Sizing Graphs

■ Polyglycol   ■ Petroleum   ■ Diester   ■ PAO


### Standard Models

Compressor Capacity, SCFM

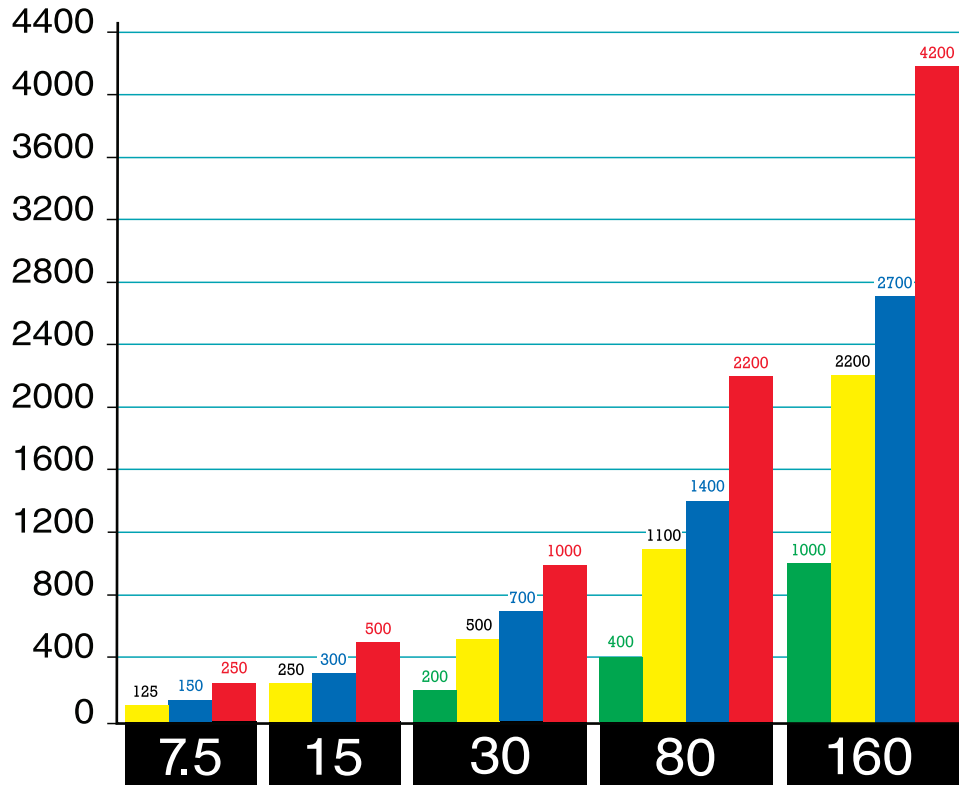

### Super Capacity Models

Compressor Capacity, SCFM

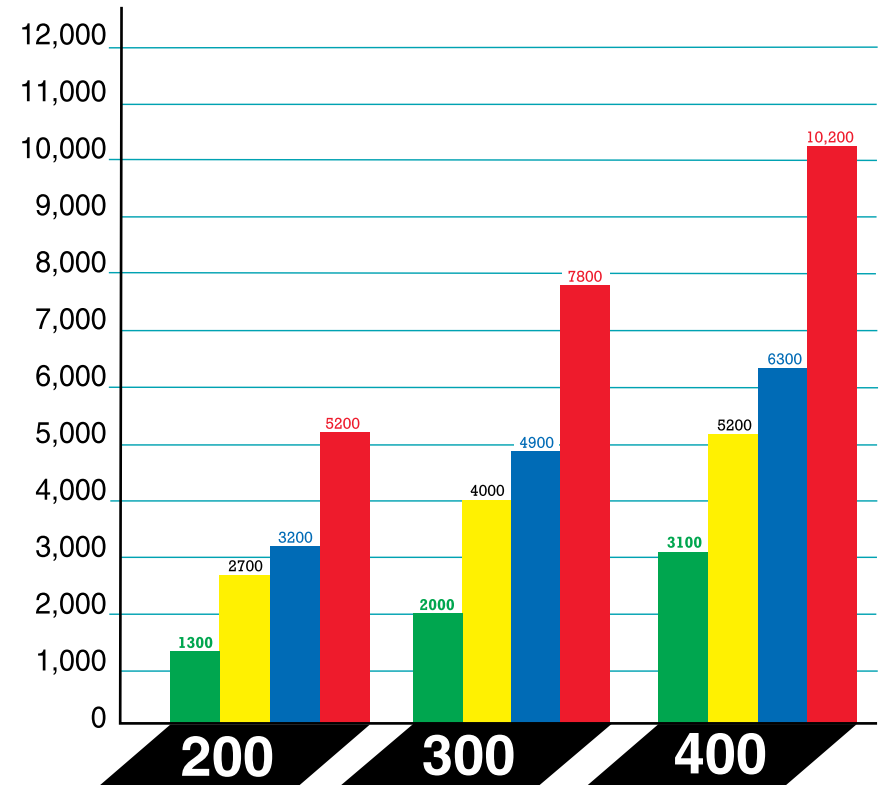

CCS

CCS



103 W. Weaver St., Carrboro, NC 27510  
PH: 314-579-9755 sales@skimoil.com  
SkimOIL.com


# ISO 100+ LUBRICANTS

## Sizing Graphs

■ Polyglycol   
 ■ Petroleum   
 ■ Diester   
 ■ PAO

### Standard Models


Compressor Capacity, SCFM

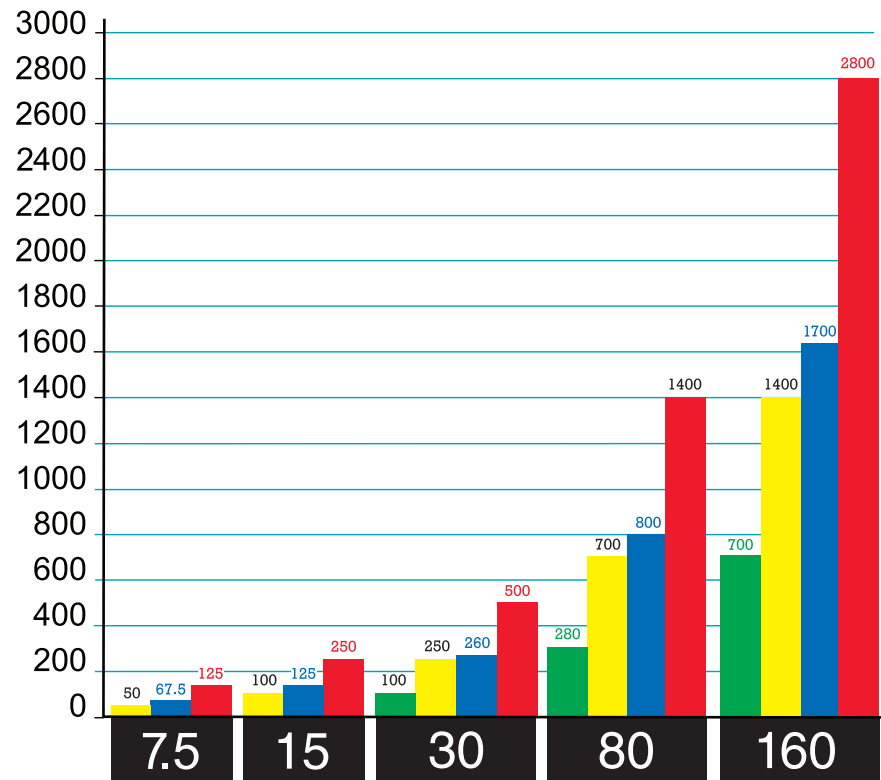

CCS

### Super Capacity Models

Compressor Capacity, SCFM

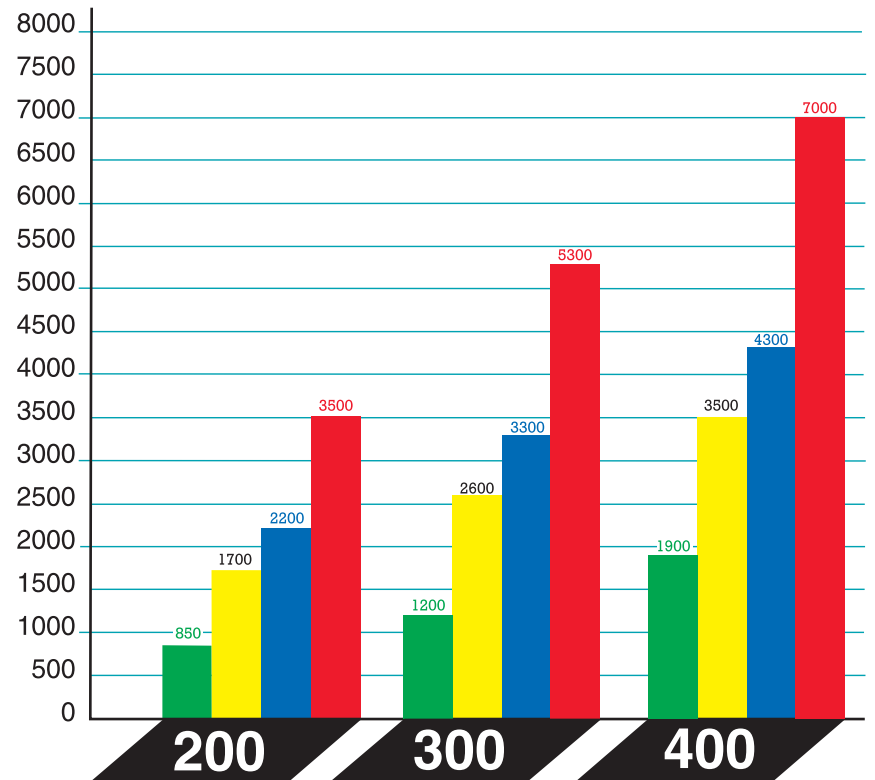

CCS



103 W. Weaver St., Carrboro, NC 27510  
 PH: 314-579-9755 sales@skimoil.com  
 SkimOIL.com